 


Your T-Mobile  
myTouch 3G Slide

What's new?

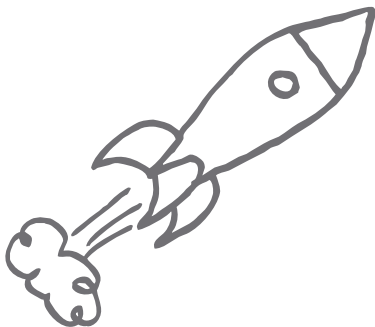

htc  
*quietly brilliant*

## What you'll find in this guide

Your T-Mobile myTouch 3G Slide uses the Android 2.2 (Froyo) platform which makes your mobile experience more exciting and engaging.

Whether you bought your T-Mobile myTouch 3G Slide already with Android 2.2 or you upgraded your current phone, read this "What's new" guide to find out the great features you can now get out of your phone.

### Contents



 
1. Find information where you want	3
2. Use your phone as a Wi-Fi hotspot	4
3. Use your phone as a modem (tethering)	5
4. Call using Wi-Fi	5
5. Change your keyboard language	6
6. Type messages easier	7
7. Set webpage image as wallpaper	8
8. Listen to online music	8
9. Find places near your location	8
10. Lock your phone in more than one way	9
11. When setting up your phone	10

# 1. Find information where you want

---

Before, you could do a sweeping search on your phone or on the Web and get several results that you weren't exactly looking for. With **Google Search**, you can target your search to a particular app on your phone or to the entire Web. This will save you time and data connection charges.

## Searching for information

1. While on the the Home screen, open the hardware keyboard, and then press . The Google search box opens.
2. Tap , and then choose where you want to target your search.
3. Enter the information you want to search in the text box, and then tap .
4. Tap a search result to open it in the related app. For example, if you searched for a contact, tap the contact to open Contacts.
5. If you couldn't find the information, tap the item to do a Web search. The phone browser opens and lists results of your search.



## Telling your phone where to search


1. From the Home screen, press MENU, and then tap **Settings > Search > Searchable items**.
2. Select the apps you want to include in the Google search options.
3. Press BACK.

## 2. Use your phone as a Wi-Fi hotspot

---

Turn your phone into a portable Wi-Fi hotspot and share your data connection with up to four Wi-Fi enabled devices.

**Important:** Using your phone as a Wi-Fi hotspot may be costly. Ask T-Mobile first about data rates before using your phone as a Wi-Fi hotspot.

1. From the Home screen, tap  > **Wi-Fi Hotspot**.
2. The first time you open Wi-Fi Hotspot, a brief introduction describing the app is displayed. Tap **OK**.
3. Enter a router name (SSID) to easily identify your phone's Wi-Fi network, or use the default name.
4. Under **Security**, choose the security protocol to use, or select **None** to create an unsecured Wi-Fi hotspot.
5. Enter a password to use to secure the Wi-Fi network, or use the provided password.

The password must be 13 characters long when using WEP security, and at least 8 characters long for WPA or WPA2 security.

6. Select the **Portable Wi-Fi Hotspot** check box to enable your phone as a wireless router.

The Wi-Fi Hotspot icon (  ) then appears in the status bar. Follow the onscreen instructions to connect your computer or other device to your phone's Wi-Fi hotspot.

### 3. Use your phone as a modem (tethering)

---

No Internet connection available for your computer? No problem. Use your phone's data connection to connect to the Internet using your computer. You need your T-Mobile SIM card inserted on your phone to use the data connection.


Before you can use USB tethering, you need to install the HTC driver first on your computer. You can find the HTC driver in the microSD that came with the phone. To install the driver on your computer, just connect your phone to your computer (make sure the microSD card is inserted in your phone), copy the HTCDriver.exe file to your computer, and then double-click the file.

**Important:** Using your phone as a modem may be costly. Ask T-Mobile first about data rates before using your phone as a modem.

1. Make sure your phone's data connection is turned on.
2. Connect the phone to the computer using the provided USB cable.
3. Slide open the Notifications panel, and then tap **Disk drive** (or the current connection you are using.)
4. On the Connect to PC screen, select **USB tethering**, and then tap **Done**.

### 4. Call using Wi-Fi

---

With Wi-Fi calling, you can use your Wi-Fi connection to make calls. To call using Wi-Fi, from the Home screen, tap  > **Wi-Fi Calling**.


To find out more about Wi-Fi calling, ask T-Mobile.

## 5. Change your keyboard language

---

Change the onscreen keyboard layout (when using Touch Input) to a number of languages you frequently use.


Before you can switch the onscreen keyboard layout to another language, you must first choose which languages you want to use.


1. From the Home screen, press MENU, and then tap **Settings > Language & keyboard**.
2. Tap **Touch Input > International keyboard**.
3. Choose the languages you want to switch the onscreen keyboard with.
4. Press BACK.
5. Open an app such as Messages to enter text.
6. To switch to a different keyboard language, tap  and then choose another language.



## 6. Type messages easier


With a bigger text box, it's easier to compose longer text messages (SMS).

1. On the Home screen, tap **Messages**.
2. Tap **New message**.
3. Fill in one or more message recipients.
4. Enter your text message, and then tap .

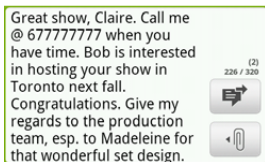

Your text message automatically becomes a picture message (MMS) when you include an attachment.

Adding an attachment to your picture message is made easier, with a slideout bar that lets you choose the type of file to include in your message.

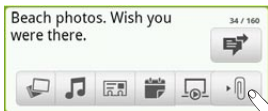

## 7. Set webpage image as wallpaper

---



You can set an image you're viewing on the Web browser as your Home screen's wallpaper.

1. On the Home screen, tap **Internet** and go to a website.
2. Press and hold an image, and then tap **Set as wallpaper** from the options menu.

## 8. Listen to online music

---

Listen to the latest beats on your phone with myTouch Music. You're going to need an Internet connection to use myTouch Music.

To open myTouch Music, from the Home screen, tap  > **myTouch Music**. If you want to request the next song on the playlist, tap  on the screen.

## 9. Find places near your location

---

Looking to grab a bite to eat in a new city? You can use Places to check places of interest near your current location.

To open Places, from the Home screen tap  > **Places**.



## 10.Lock your phone in more than one way

---

Your privacy is important to us. That's why we've given you more choices to lock your phone and prevent access to your most personal information.

1. From the Home screen, press MENU, and then tap **Settings > Security**.
2. Tap **Set up screen lock**.
3. Choose how you want to lock your phone:

<b>Pattern</b>	Follow the onscreen instructions to draw a screen unlock pattern.
<b>PIN</b>	Enter a PIN with at least 4 numbers.
<b>Password</b>	Enter a password containing at least a letter and numbers or symbols.

The next time you turn on your phone or wake up the screen, you must draw your unlock pattern or enter your PIN or password to unlock the screen.

### Removing the pattern, PIN, or password lock

1. From the Home screen, press MENU, and then tap **Settings > Security**.
2. Tap **Change screen lock**.
3. Draw the correct screen unlock pattern, or enter your PIN or password.
4. Tap **None**.

## 11. When setting up your phone

---

You'll find that the paths to some settings on your phone have changed. See the table below for the new ways of accessing and changing these settings.

To	Do this on the Settings screen
Change sound settings, such as ringtone, notifications, and more	Tap <b>Sound</b> . Then choose the sound setting you want to change.
Change display settings, such as brightness, screen timeout, and more	Tap <b>Display</b> . Then choose the display setting you want to change.
Turn location services and GPS on or off	Tap <b>Location</b> . Then select or clear their check boxes.
Set up credential storage to manage Wi-Fi and VPN security certificates	Tap <b>Security</b> . Under the Credential storage section, tap <b>Set password</b> .
Reset your phone	Tap <b>SD &amp; phone storage &gt; Factory data reset</b> .